




OIL FILL WITH BREATHER

GEARBOX DETAILS;

- GEAR PATTERN R-N-1-2-3-4-5-6
- MANUALLY OPERATED LOCKOUT BETWEEN 1ST/NEUTRAL
- OIL CAPACITY APPROXIMATELY 1 LITRE. USE ONLY FULL SYNTHETIC 75w90 OR 75w140 GRADE OIL
- ELITE RECOMMEND THAT YOU DO NOT USE THE CLUTCH ON UP-SHIFTS, BUT YOU **MUST** ELIMINATE THE POWER THROUGH THE GEARBOX EITHER VIA AN IGNITION CUT SYSTEM OR LIFTING FULLY OFF THE ACCELERATOR
- DOWN SHIFTING IS RECOMMENDED TO BE DONE USING THE CLUTCH. IT IS ALSO RECOMMENDED THAT YOU DO NOT OVER STRESS THE GEARBOX BY USING IT FOR ENGINE BRAKING
- WHEN STATIONARY IT MAY BE NECESSARY TO 'SLIP THE CLUTCH' TO ENGAGE EITHER 1ST OR REVERSE GEAR
- THE CAR **MUST** BE STATIONARY BEFORE SELECTING REVERSE, IF REVERSE IS SELECTED WHEN CAR IS STILL IN A FORWARD MOTION THIS WILL HAVE A CATASTROPHIC EFFECT ON THE GEARBOX INTERNALS
- GEARBOX CASES ARE SEALED USING O-RINGS AND INPUT & OUTPUT ARE SEALED USING LIP SEALS

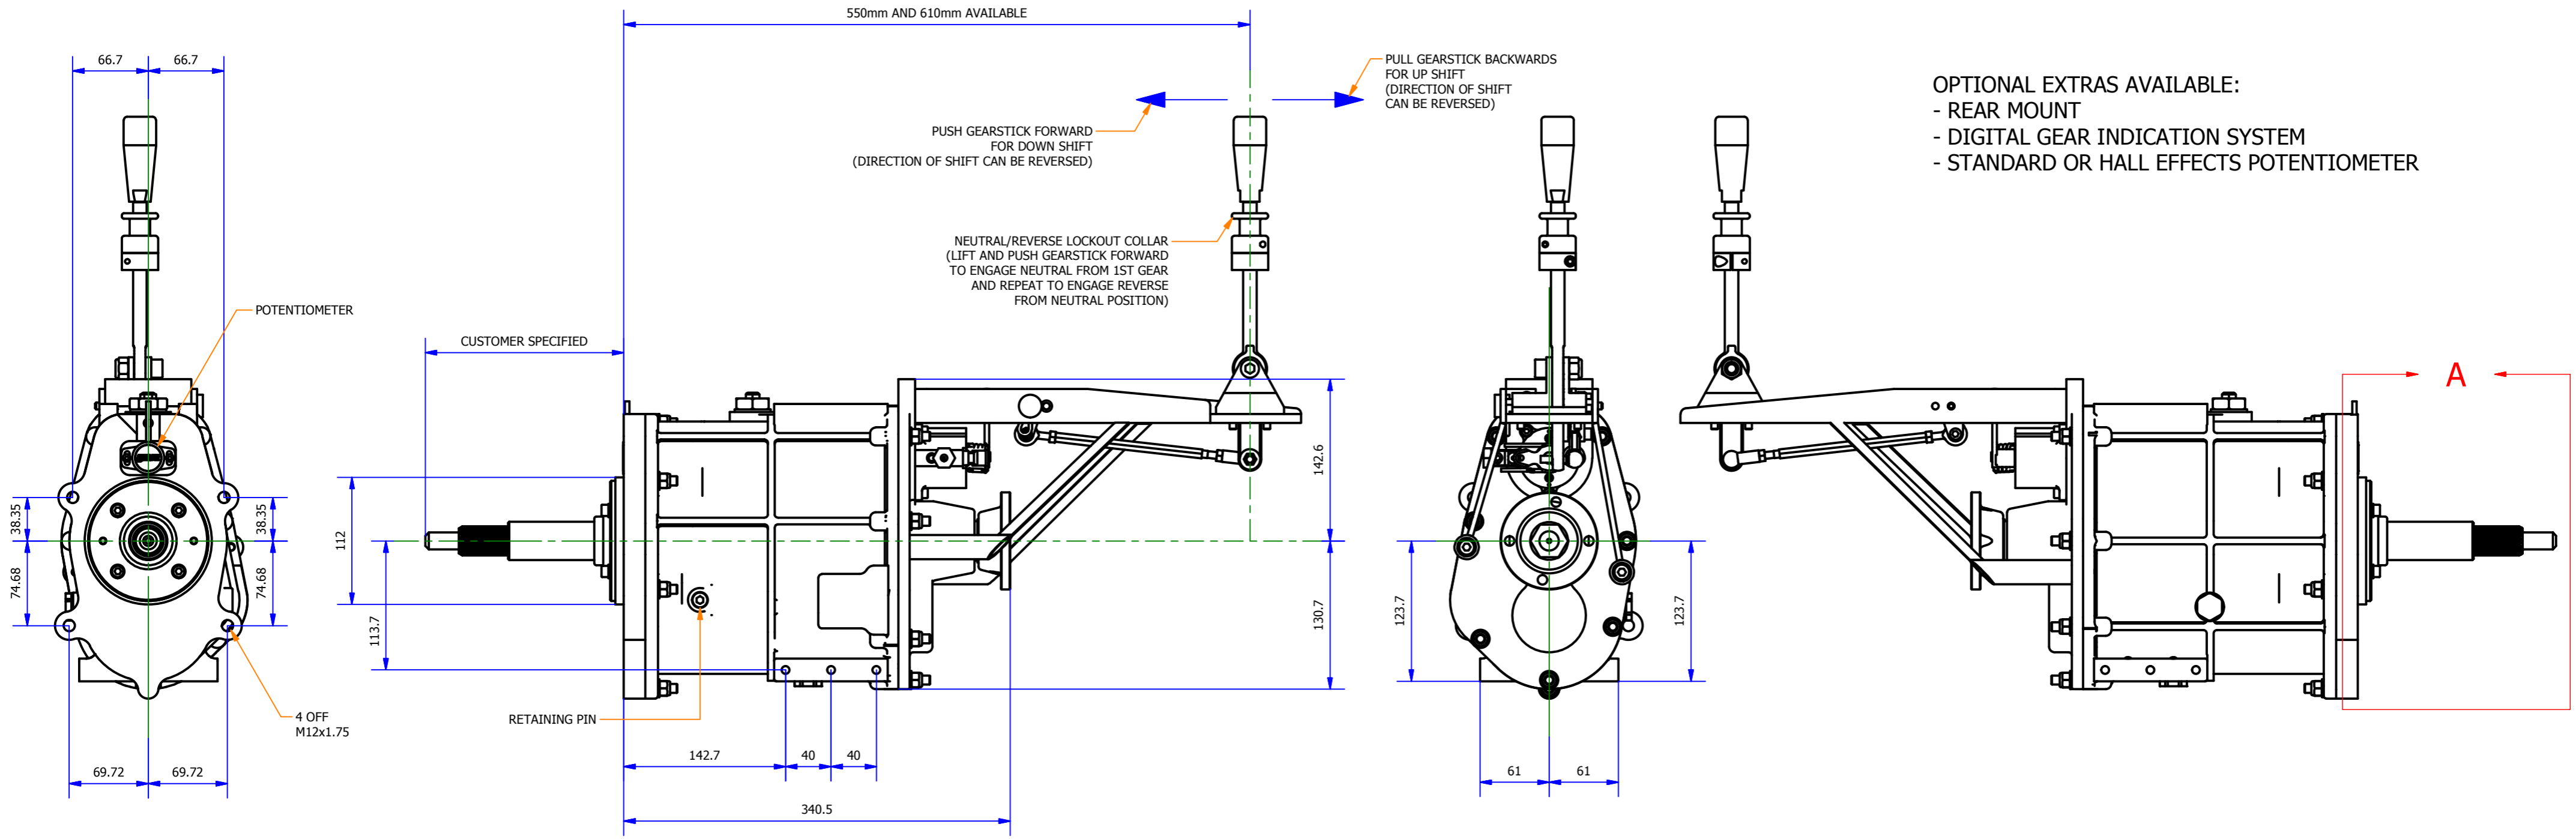

- OPTIONAL EXTRAS AVAILABLE:
- REAR MOUNT
  - DIGITAL GEAR INDICATION SYSTEM
  - STANDARD OR HALL EFFECTS POTENTIOMETER

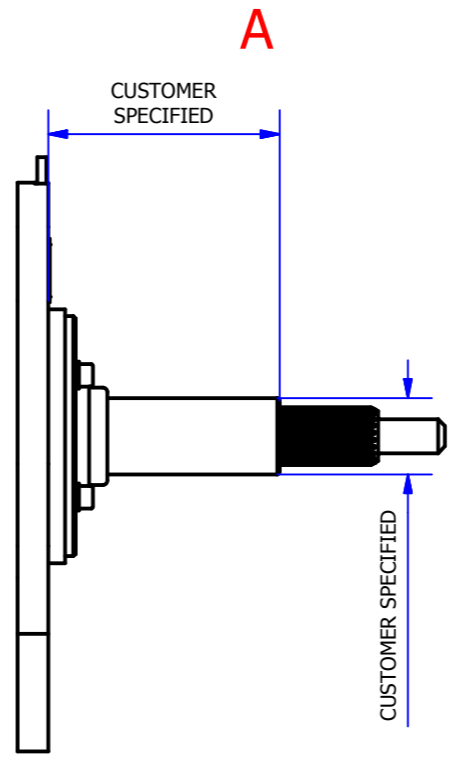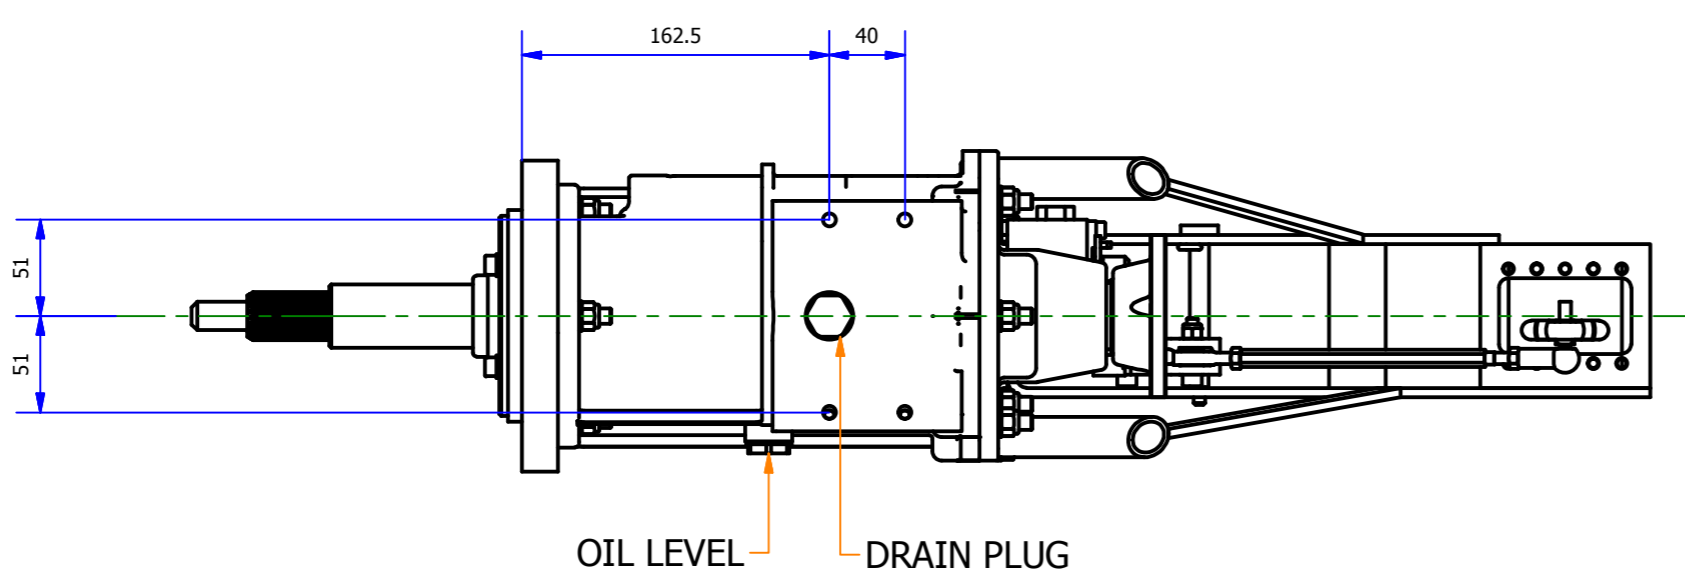

Gearworks,  
Salem St.,  
Etruria,  
Stoke On Trent, ST1 5PR.  
Tel 01782 280136,  
Fax 01782 269913,  
Email contact@eliteracingtransmissions.com

TITLE  
FULL ASSEMBLY - IL200-5S