


Parts List			
ITEM	PART NUMBER	TITLE	QTY
1	ERT514231	LAYSHAFT - LANDROVER LT77 TR8	1
2	ERT314235	5TH LAYSHAFT GEAR - LANDROVER LT77 TR8	1
3	ERT314234	4TH LAYSHAFT GEAR - LANDROVER LT77 TR8	1
4	ERT314233	3RD LAYSHAFT GEAR - LANDROVER LT77 TR8	1
5	ERT314232	2ND LAYSHAFT GEAR - LANDROVER LT77 TR8	1
6	ERT314240	5TH OUTPUT GEAR - LANDROVER LT77 TR8	1
7	ERT314238	3RD OUTPUT GEAR - LANDROVER LT77 TR8	1
8	ERT314237	2ND OUTPUT GEAR - LANDROVER LT77 TR8	1
9	ERT314236	1ST OUTPUT GEAR - LANDROVER LT77 TR8	1
10	ERT514239	INPUT SHAFT / 4TH OUTPUT GEAR - LANDROVER LT77 TR8	1
11	ERT814247	PUMP DRIVE KEY - LANDROVER LT77 TR8	1

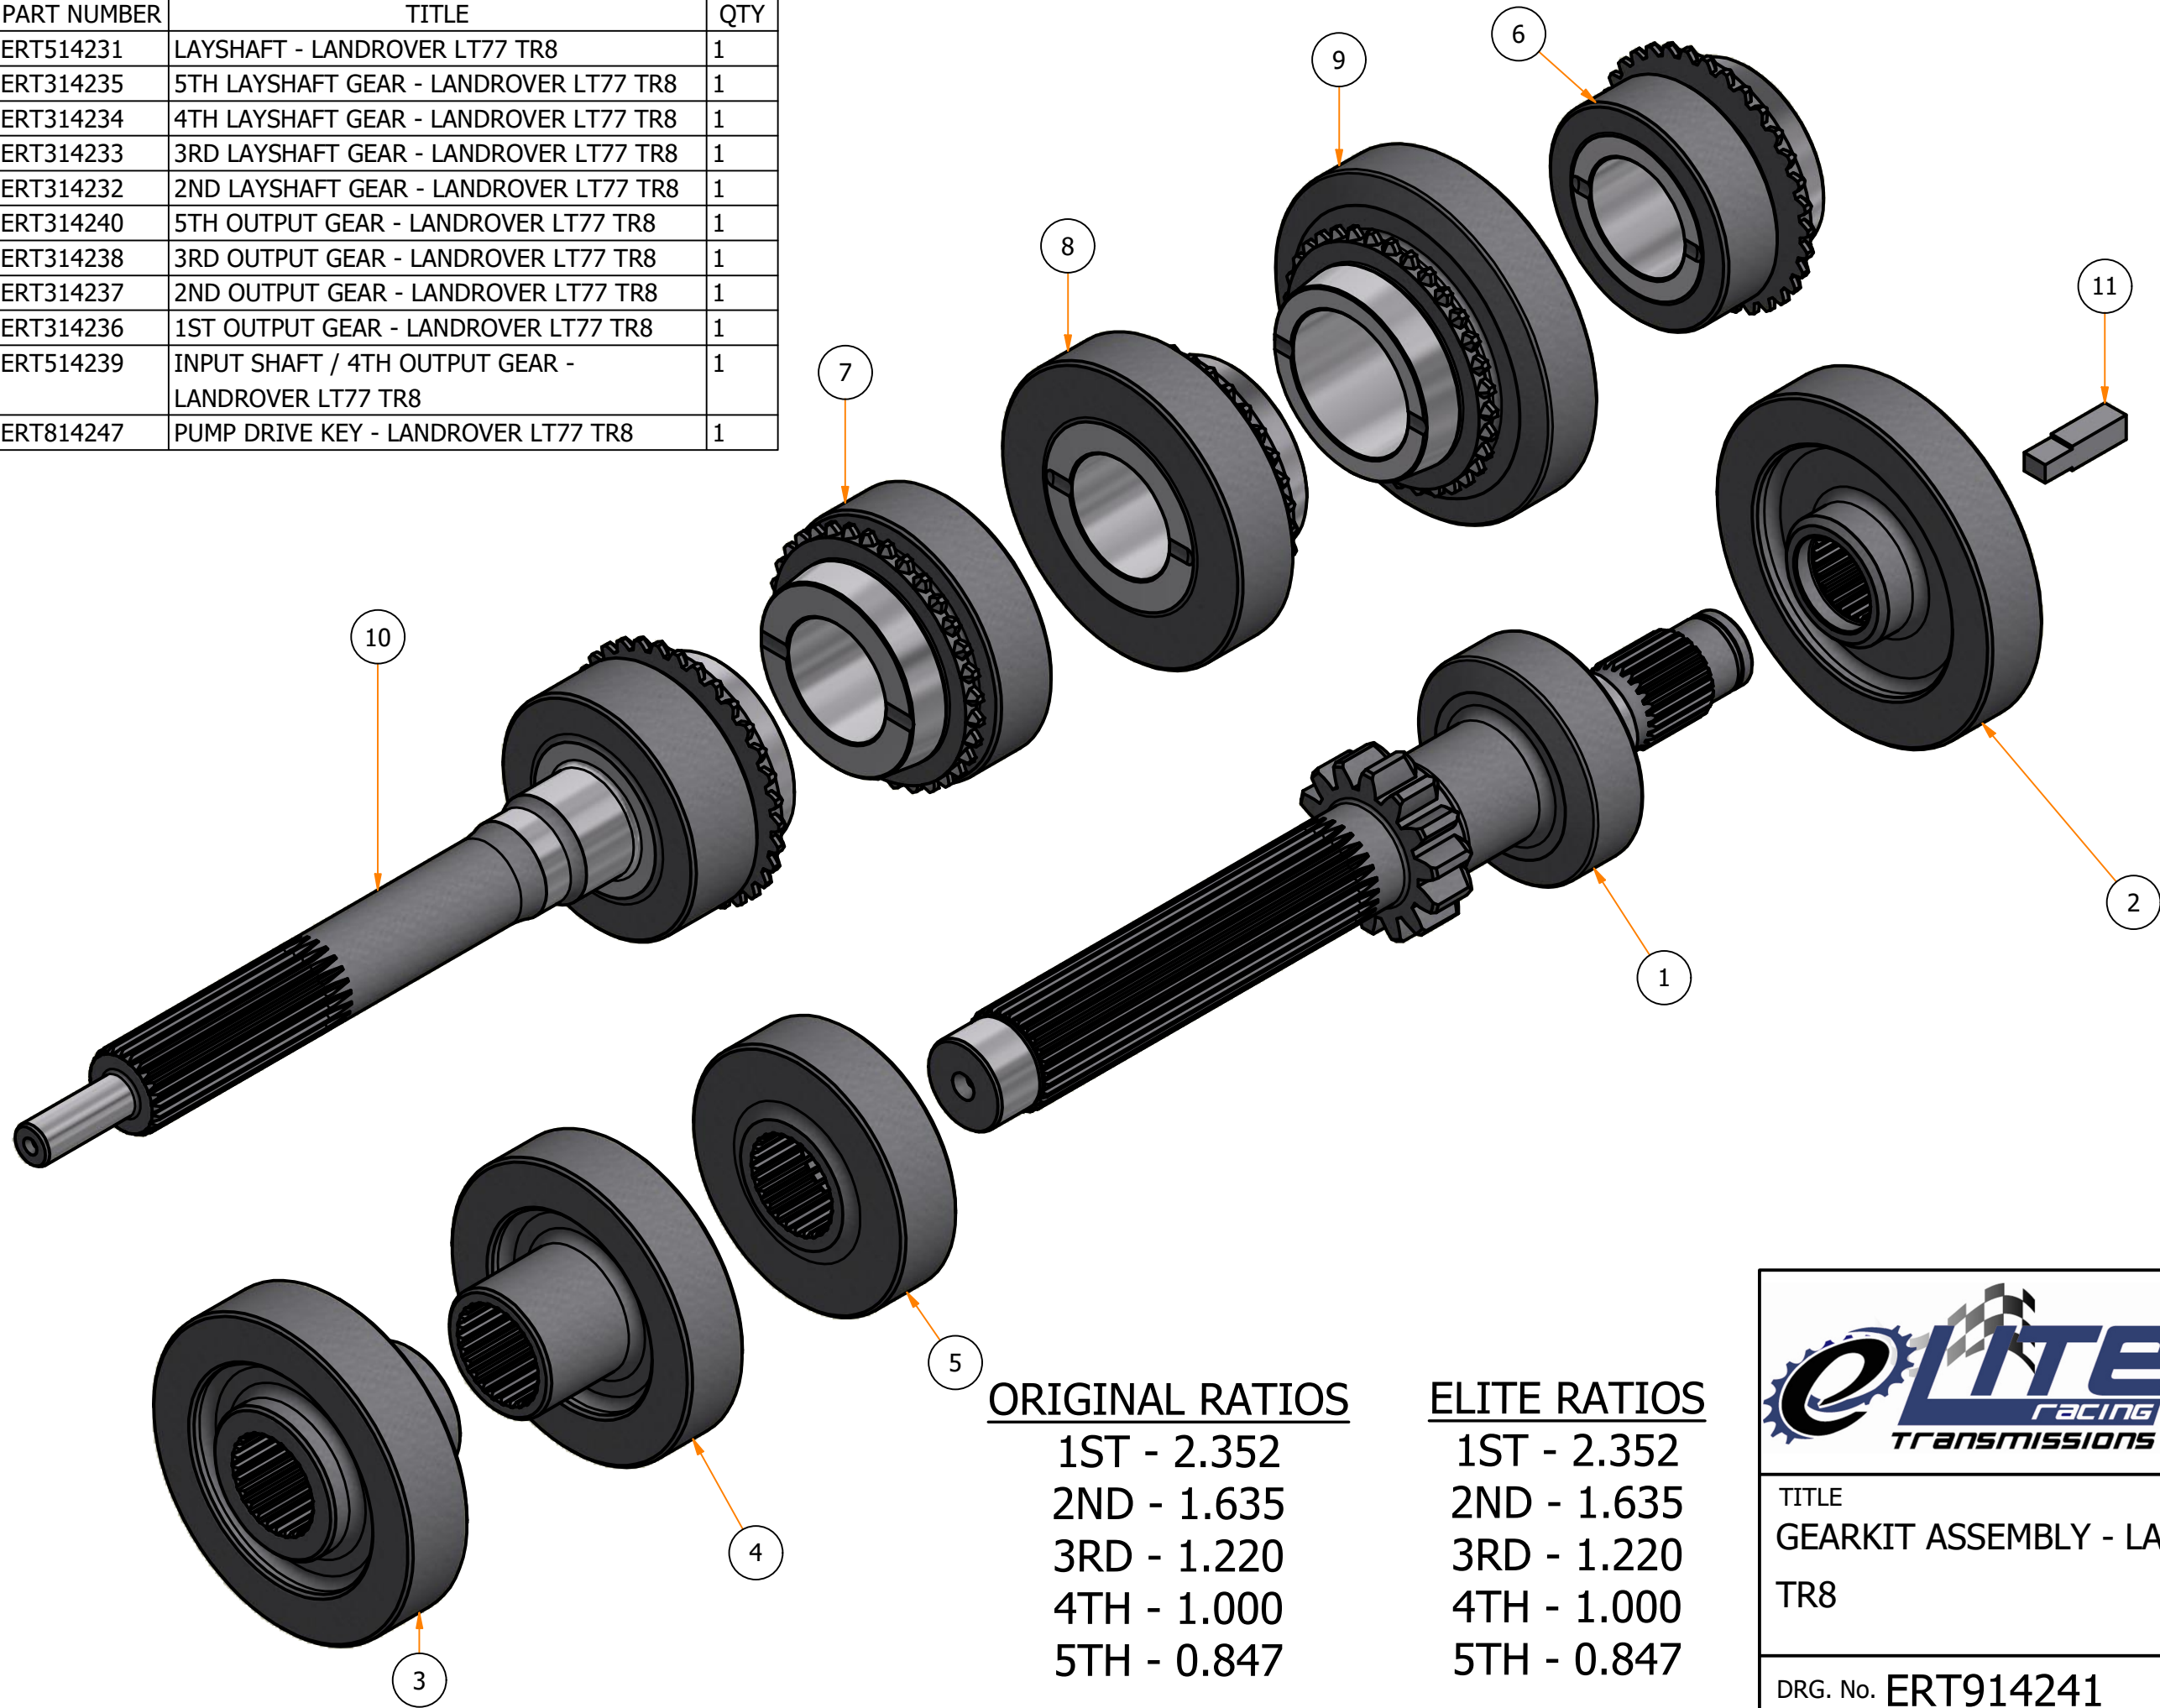

ORIGINAL RATIOS

1ST - 2.352
 2ND - 1.635
 3RD - 1.220
 4TH - 1.000
 5TH - 0.847

ELITE RATIOS

1ST - 2.352
 2ND - 1.635
 3RD - 1.220
 4TH - 1.000
 5TH - 0.847



Gearworks,
 Salem St.,
 Etruria,
 Stoke On Trent, ST1 5PR.
 Tel 01782 280136,
 Fax 01782 269913,
 Email contact@eliteracingtransmissions.com

TITLE
**GEARKIT ASSEMBLY - LANDROVER LT77
 TR8**

DRG. No. **ERT914241**

Issue
 0